


# INSTALLATION AND SERVICE MANUAL


## Installation Instructions to Replace LED Module and Glass for Light Linear PT 4 ULI-21172

Tools Needs: T10, T20 Torx for (M3 and M4 Screws), Thermal Paste


Remove the heat-sink from the fixture housing:  
Remove the top screws and pull out the heat-sink.

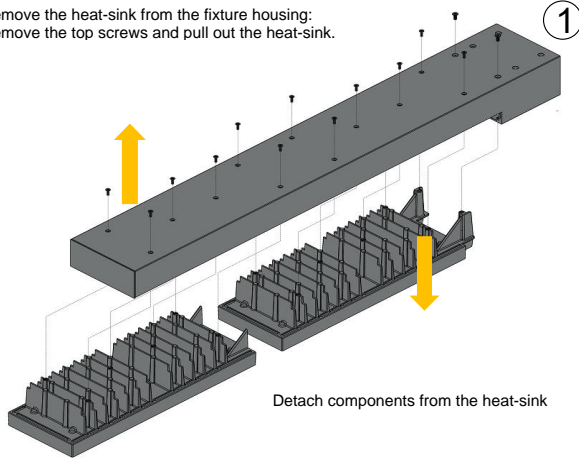



Remove the lens from the heat-sink.

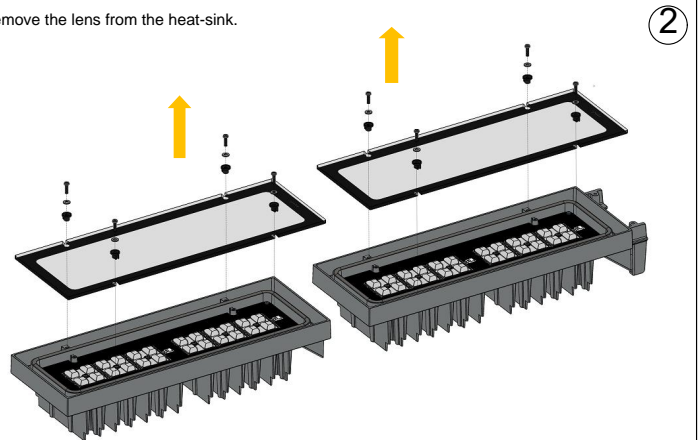


Remove the cover plate, optics, and LED boards from Heat-Sink.

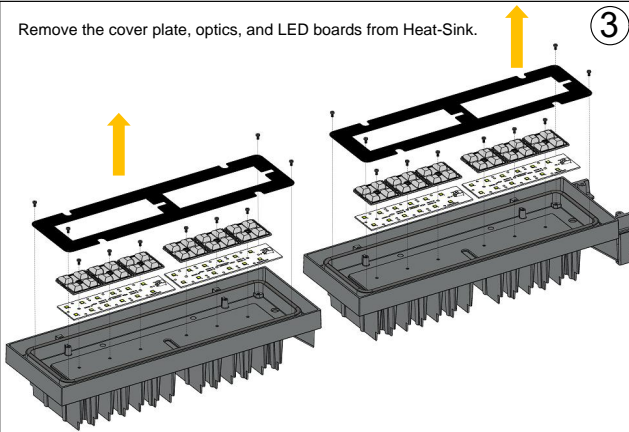


Assemble the new components:  
Attach the new optics onto the New LED boards.  
Apply a thin layer of thermal grease to the back of the New LED boards.  
Place the New LED boards and optics onto the heat-sink.  
Install and wire the LED boards:

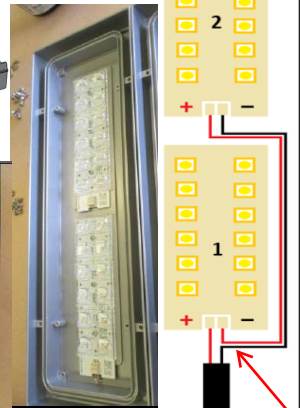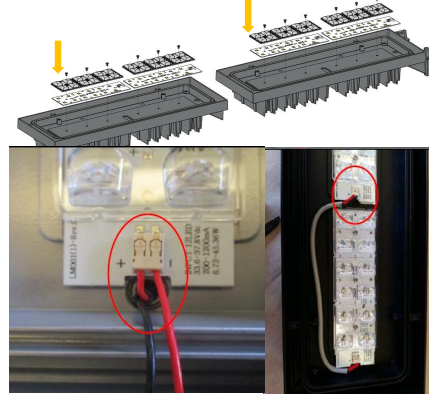

Reassemble the heat-sink to the fixture housing

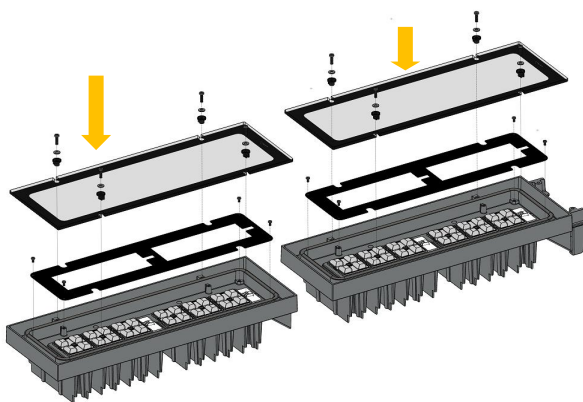

Reattach the cover plate and glass to the heat-sink.

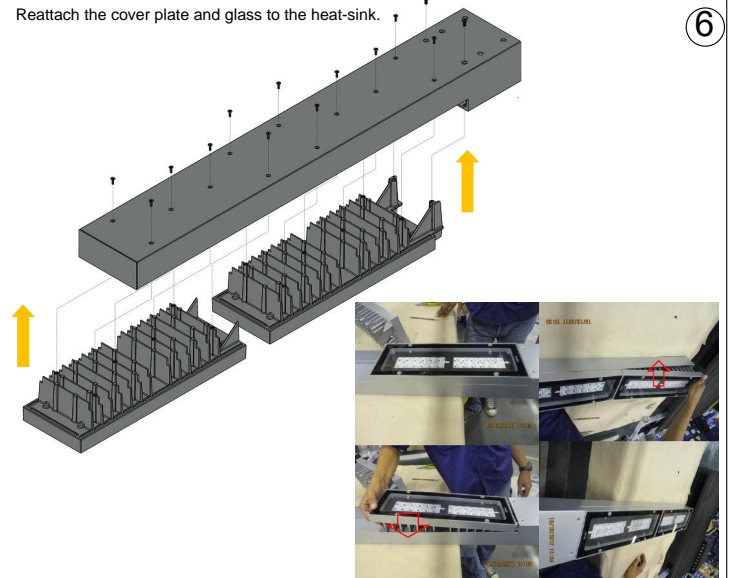

**Ligman Lighting USA**

### Notice to Installer

#### Wiring Instruction ⚠ Warning:

- Risk of Fire and Electrical Shock, This fixture must be installed only by a qualified electrician, Installation must adhere to the National Electrical Code (NEC) and all applicable local and federal regulations.
- Always disconnect power before servicing the fixture.